



Framed Double Chalkboard Stands Instructions for Use

What to Expect

Chalkboard stands feature real chalkboards with a textured slate gray surface to create an elegant and rustic product. Boards remove easily from the frames, so you can lay the chalkboards flat to change your message, or keep it right inside the frame!

Overall Care

Do not drop the chalkboards or frame, as this can cause damage. If the boards are dropped, they may dent or bend the corners. If this occurs, the boards may become difficult to move in and out of the frames.


Removing/Replacing your Board in the Frame



Step 1: Insert top and push up



Step 2: Pivot board in past bottom channel

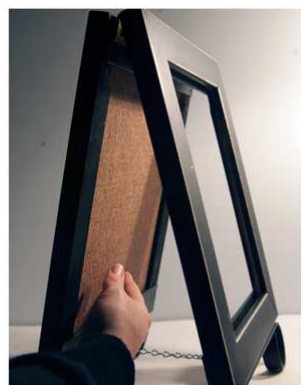

Step 3: Slide board down; ready to go!

Opening A-Frame



Separate frame bottoms until chain is extended and taut.


Closed

Open

Marker Care and Instructions

Store marker on its side with cap in place. Do not expose to extreme temperatures or direct sunlight. Marker removes easily with water and sponge.

1.  **SHAKE**
For best results, shake pen well before removing cap.

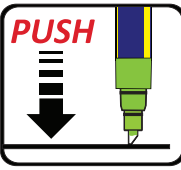2.  **PUSH**
Push tip straight down on flat surface. May take several tries.

3.  **WRITE!**
Write with your marker! Push down occasionally to add more ink.

 **WASH**
To wash off marker, use water and a sponge.