



Register your products at Cohas.com

Framed Single Chalkboard Stands Instructions for Use

What to Expect

Chalkboard stands feature a real chalkboard with a textured slate gray surface to create an elegant and rustic product. Board removes easily from the frame, so you can lay the chalkboard flat to change your message, or keep it right inside the frame!

Overall Care

Do not drop the chalkboard or frame, as this can cause damage. If the board is dropped, it may dent or bend the corners. If this occurs, the board may become difficult to move in and out of the frame.

Removing/Replacing your Board in the Frame



Step 1: Insert top and push up




Step 2: Pivot board in past bottom channel



Step 3: Slide board down; ready to go!

Using Pivot Arm

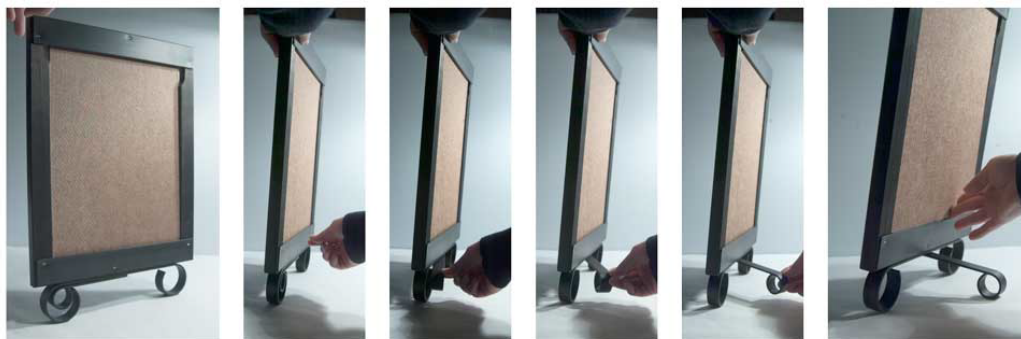

Closed

Open

Pull arm out from back side until it creates a 90 degree angle with frame


Marker Care and Instructions

Store marker on its side with cap in place. Do not expose to extreme temperatures or direct sunlight.


Marker removes easily with water and sponge.



For best results, shake pen well before removing cap.

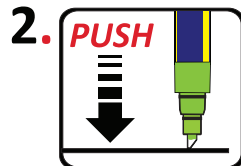

Push tip straight down on flat surface. May take several tries.

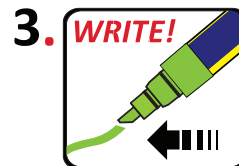

Write with your marker! Push down occasionally to add more ink.



To wash off marker, use water and a sponge.